

STAUF COMFORT PAD



Cork PUR Foam Underlay, 5 mm thick



A+

Technical Datasheet


Product number	✓ 110350
Special features	✓ Sound and heat insulation ✓ mechanical decoupling
Application range	✓ for impact sound insulation and as stress relief board
Suitable subfloors	✓ sanded mastic asphalt screed ✓ calcium sulphate (flow) floors ✓ wooden planks, wood fibre boards ✓ STAUF levelling compounds ✓ chipboards V100 (E1), OSB boards ✓ stone, ceramic, terrazzo, tiles ✓ cement floors
Product properties	✓ permeable ✓ elastic ✓ suitable on subfloor heating systems ✓ Polyurethane-bonded cork-foam-granules ✓ heat insulating ✓ increases living and walking comfort
Color	✓ Approx. 90 minutes at 20°C
DIBT	✓ Z-158.10-203
Consumption per m ²	✓ web width 1 m
Additional instructions	✓ Selection of adhesive: sub floor preparation, priming and levelling according to subsequent type of parquet installation. Use STAUF Polyurethane parquet adhesives. Before using other adhesives please consult the STAUF application engineering department. For parquet installation, preferably use the same adhesives used for bonding of parquet underlay.
Available packaging	✓ 12.5 m ² roll

thermal conduction resistance	✓ R = 0.041 m² KW
impact sound insulation	✓ up to 18 dB (ISO 140-8/ISO 717-2)
Emicode	✓ EC1 plus




EXAMINATION OF SUBFLOOR

Prior to processing, the subfloor must be checked according to the standard DIN 18356, DIN 18365 or corresponding national standards. The subfloor shall be resistant to pressure and tension, free of cracks, must have sufficient surface strength, be permanently dry, level, clean and free of from contaminants that may prevent adhesion, sinter layers etc. In addition, porosity and grip of surface need to be checked. Also check moisture content and absorption of subfloors as well as temperature, air humidity and subfloor temperature.

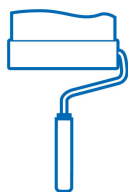

SUBFLOOR PREPARATION

It must be ensured that the subfloor is ready for installation by performing proper subfloor preparation, floors must be clean, have sufficient surface strength, must be level, permanently dry and free of cracks. A mechanical pretreatment of the subfloor (sweeping, vacuuming, mechanical brushing, sanding, milling, shot blasting) must be performed depending on type and condition of subfloor. Cracks and joints, except expansion joints and other construction joints, shall be solidly closed with STAUF repair resin and floor brackets. Cavities and indentations can be filled with a non self-levelling STAUF levelling compound. If necessary, make sure subfloors are level, have sufficient absorptive capacity and grip by applying the appropriate STAUF levelling compound.

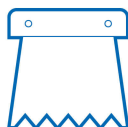

PROCESSING

Perform sub floor preparation, priming and levelling, if necessary, just like with respective direct bonding. Lay out the underlayment in the room and roughly cut to size. Fold back the sheet to the middle and apply adhesive to sub floor. Install the sheets and rub or roll down firmly. Joints must abut, avoid gaps, no overlaps. Install floor covering at the earliest 24 hours after installation of underlay, depending on type of adhesive used.



LIMITATION OF LIABILITY

The foregoing representations are based on the results of our most current product and material testing and are of a non-obligatory advisory nature only since we have no control over the actual quality of workmanship, materials used and worksite conditions. As such, they do not constitute an express or implied warranty of any kind. The same applies to our commercial and technical consultation services which are provided free-of-charge and without obligation. Therefore, we strongly recommend that prior on-site testing be conducted to observe and study the suitability of the product for the intended purpose. With the release of this technical information, all prior technical information (technical data sheets, installation recommendations and other information regarding similar purposes) becomes invalid.